


## Setup and configuration

1

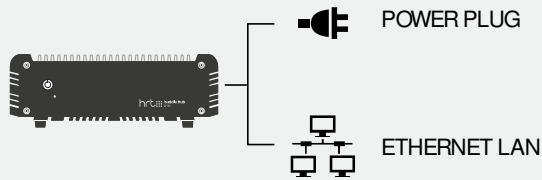

### CONNECT TO ADMIN PAGES

Admin page Url:

The IP address of Huddle Hub One depends on your company LAN address family (e.g. 192.168.1.x), on your DHCP server and in general on your network configuration. Ask your network administrator for the IP address of your Huddle Hub One.

Admin page password: password

Please note:

At the first start, Huddle Hub One takes a few minutes to update firmware and configure itself. During this time the system is not available.

2

www.hrt.website



www.hrt.website



App Store



Google Play



## Download the apps

3



### ACCESS VIA COMPANY LAN

1. Connect your device to the same company LAN you connected the hub to

2. Launch the Huddle Hub App

## Connect devices

4

### Start Session



Launch the app, click the 9 dots icon (Status Bar on MacOS or Tray Bar on MS Windows), and click on "HuddleHubOne". Please note: a Passcode may be required.

### Start Presentation



Click on "Present" to start presenting your screen. Please note: only Desktop Apps (MacOS and Windows) can be presenter.

### Start Multicam feed



Click on "Start multicam feed" and select the Huddle Hub video driver in your video conference app.

camera: Huddle Hub